


BACK DOOR COURTESY SWITCH


COMPONENTS

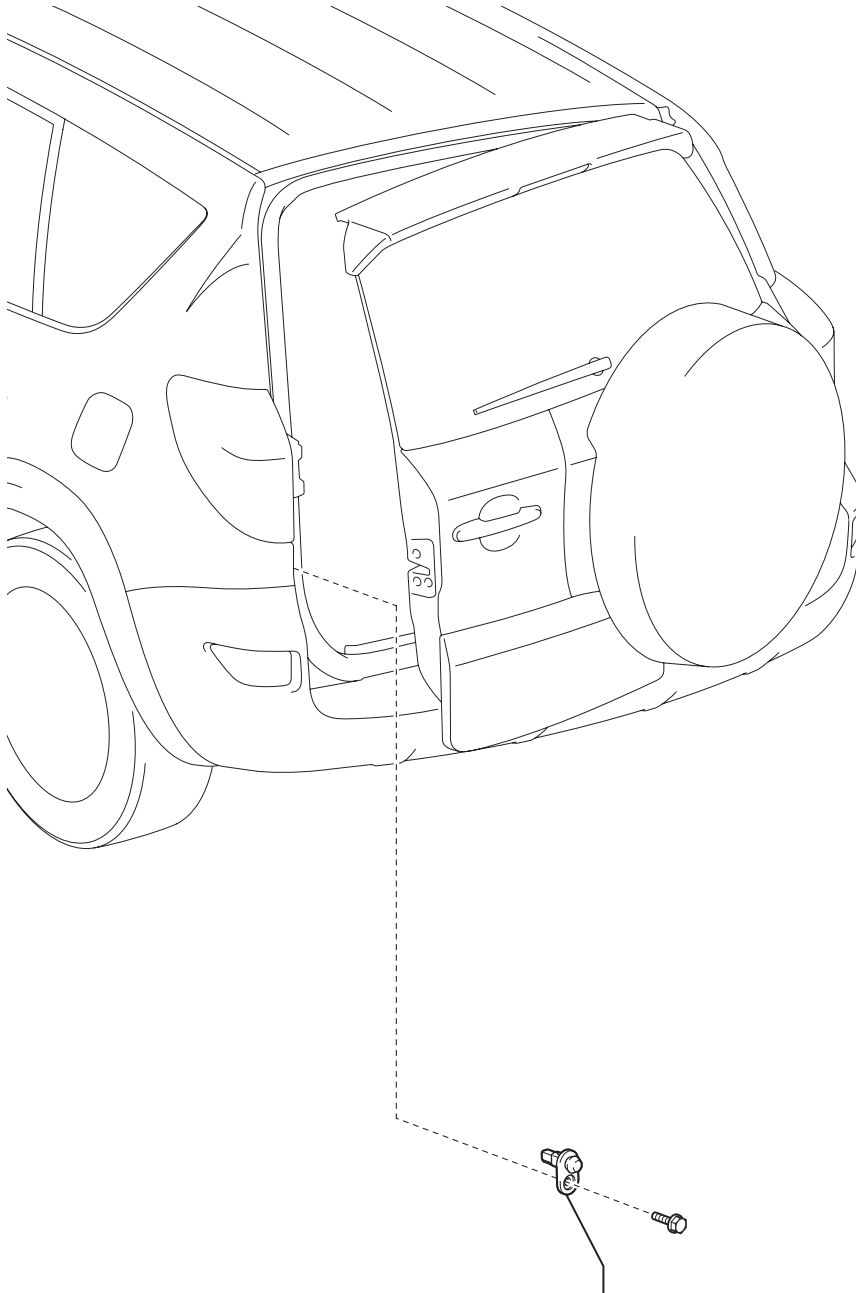

BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY

REMOVAL

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
- 2. REMOVE BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY
 - (a) Remove the bolt and switch.
 - (b) Disconnect the connector.

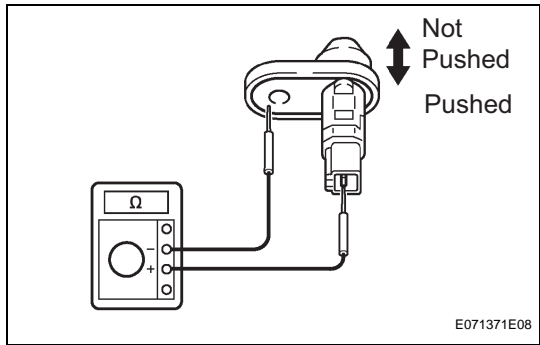

INSPECTION

- 1. INSPECT BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY
 - (a) Measure the resistance of the switch.
Standard resistance

Tester Connection	Condition	Specified Condition
1 - Switch body	Pushed	10 kΩ or higher
1 - Switch body	Not pushed	Below 1 Ω

If the result is not as specified, replace the switch assembly.



INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).



1. **INSTALL BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY**
 - (a) Connect the connector.
 - (b) Install the switch with the bolt.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**